



Joule Alarm Keyboard Roadmap

To unlock UL hold **▶** and **M** for 5s
 To unlock AA1 hold **▶** and **M** for 10s
 unlock hold LOD **▶** and **M** for 20s
 To move across memory settings
 press **M**
 To change settings parameters or
 mnemonics press **▼** or **▲**

Legend

- UL programmable settings
- AA1 programmable settings
- LOd programmable settings
- Numeric Parameters
- Mnemonics

