


Using Phasefale Refrigeration Alarm controller

Top Line shows
System number
and description


2nd line shows if
system is cooling,
idle or DEFROSTING

3rd line show last alarm
date (or ALARM if
currently in alarm)

Bottom line shows
the maximum temperature on
this group of cabinets

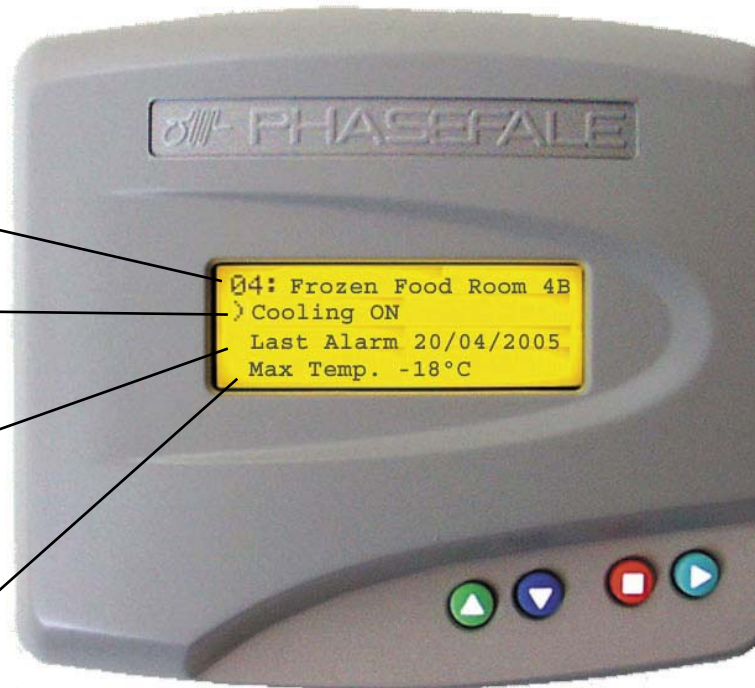

Key Functions

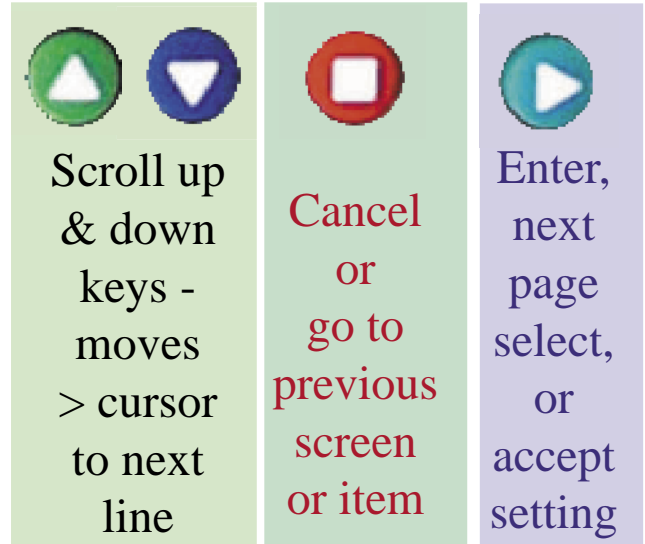

To Identify Channels in Alarm

Use the enter key to scroll pages through all channels. The 3rd line indicate Last alarm date or ALARM if current. The 2nd line indicates if the channel is cooling, idle (no cooling required) or defrost. Note: During Defrost system temperatures are higher.

To View History Logs of Alarms

You can view details of when alarms occurred: Scroll to the channel , press down past MAX Temp to "View Event Logs" then enter to view recent alarms. Use down to view more, cancel when finished

The Main Screen

```
System Control    :91
>04/12/02        13:03
ALARM on 2 Systems
View Event Logs
```

This screen summarizes date, time & total # of systems in alarm. Scroll down to View Event Logs to see all system events together

For Refrigeration Service Call