



Connection of Multi Control to Case Control

Notes:

1. Power is supplied from Case control to Multi
2. Multi can plug onto Case control with case control still on main Databus IF case monitor address does not conflict
3. If making hardware address changes, recommend unplugging Case Control from Main Databus