

IMPORTANT INFORMATION.
PLEASE READ THE FOLLOWING NOTICES BEFORE USING THE CONTROL.

1. This control should be set to the desired controller type by setting the DIP switches S6-1, S6-2 & S6-3 according to the table printed on the circuit board and below. (see picture for location of table and switches).
2. As this control can be set to one of eight different types of control please read this important instruction **BEFORE** applying power to the control.
3. Before changing switches, you can turn OFF the power to the control via the slide switch shown in the photo below.
4. **DO NOT** change the S6 DIP switches whilst the controller is powered. This can lead to overheating of the CPU and the unit **failing**.
5. Be careful when changing controller types! The controller will detect the changed DIP switch settings and offer to “load defaults” for the NEW controller type. Accepting the load defaults setting will erase ALL previous settings for the earlier controller type.

For instructions on each controller type, please load the Phasefale CD (Windows format) and select the Technical Information Section for Presscon Controls, or visit tech support at our website www.phasefale.com.au To obtain the Phasefale CD, please call us on +61 3 95530800. Each of the 8 types of control is listed and the data is supplied in Adobe Acrobat Format.

Controller Type Summary

S6-1	S6-2	S6-3	Type
OFF	OFF	OFF	Rack Control (Single)
OFF	OFF	ON	System Control
OFF	ON	OFF	Rack Control (Multi)
OFF	ON	ON	Air Con. (DDC) Control
ON	OFF	OFF	Lighting Control -LTC
ON	OFF	ON	Supervisor Control
ON	ON	OFF	Chicken Warmer
ON	ON	ON	Case Control Monitor

