


PR/GTXI settings for Supervisor

This interface board is used to convert signals from a CPC gas leak sensor to level suitable for Presscon Supervisor. The Following Settings are used;

1. connected to a sensor 8 input set to temperature (USE AN 8 CHANNEL SENSOR CARD)
the gas settings for a supervisor are

39
42
65
255
255

note it is accurate up to 100ppm, beyond this a small scaling error occurs

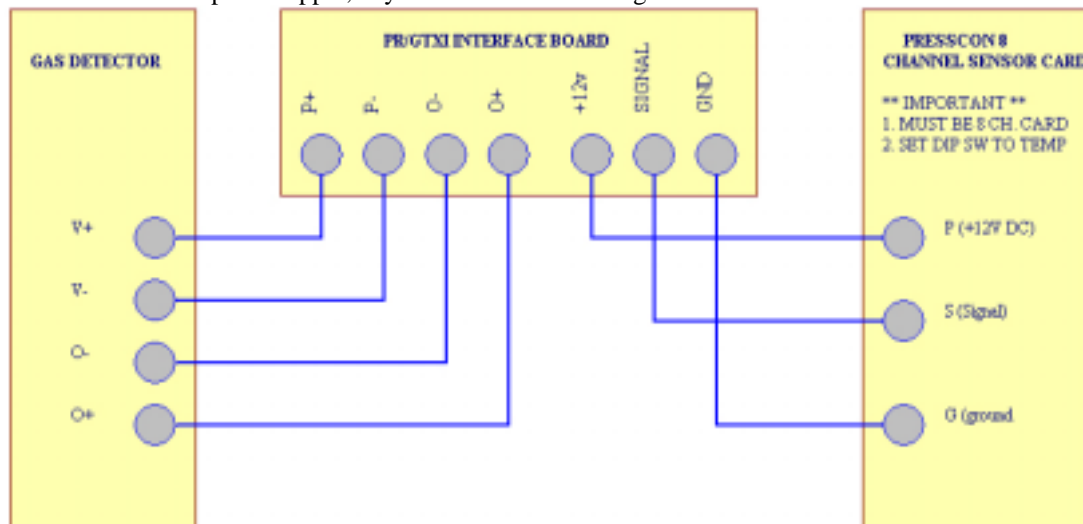

For further information please quote R&D notation # 560.

Phasefale Pty. Ltd.

36 Bulli Street MOORABBIN
VICTORIA 3189, AUSTRALIA
Tel +613 9553 0800 Fax +613 9553 3993
Web Site www.phasefale.com.au
Email sales@phasefale.com.au