

Presscon Network. Temperature Control

Ref TMPMP

°C or °F readings and setpoints can be used

```
0 5 : 3 . 2 ° C : o n
1 . 5 ° C : 2 . 5 ° C
```

Press the up arrow to advance in this direction
Press the down arrow to go in the reverse direction

Press > to see control settings of each channel, Press # to return to normal menu

```
0 1 : - 2 3 . 5 ° C : o n
- 2 6 . 5 ° C : - 2 5 . 5 ° C
```

```
0 5 : 3 . 2 ° C : o n
D A I R Y R O O M
```

```
P r e s s c o n v 1 . 0
A l a r m C o n t r o l
```

```
0 1 : - 2 3 . 5 ° C : o n
F R O Z E N F O O D R M 1 a
```

```
0 4 : 2 . 7 ° C : o n
S E R V I C E D E L I
```

```
0 3 : - 2 . 3 ° C : d e f
B L O O M B O X
```

```
0 2 : - 3 0 . 1 ° C : i s o l
F R E E Z E R C A S E 4 b
```

```
0 4 : 2 . 7 ° C : o n
1 . 5 ° C : 2 . 5 ° C
```

```
0 3 : - 2 . 3 ° C : d e f
- 3 . 0 ° C : - 2 . 0 ° C
```

```
0 2 : - 2 3 . 5 ° C : i s o l
- 2 9 . 5 ° C : - 2 8 . 5 ° C
```

Channel 3 is defrost, its relay will be off (The defrost signal is from a separate defrost controller card)

** Displays shown for a system with 5 channels active

Channel 4 has been isolated from control by pressing ^ and # on keyboard

Programming Menus

Press and > together for 10 seconds

P R O G R A M M I N G M O D E

Notes: the above menus are displayed automatically in the order shown press the >> key to hold on a particular menu press ^ and v to move forward and back through these menus

Press to exit programming AT ANY TIME

To System Options

C O N F I G U R A T I O N

Access to configuration

from config. menu

C O N T R O L

S Y S T E M O P T I O N S

to security

S E N S O R S & R E L A Y S

N E T W O R K C A R D S

S E C U R I T Y

for each control channel (1-50) which uses a sensor: location of channel input

location control relay output for all channels

return to configuration menu

for all found

number of this card

return to configuration menu

Remote Setting adjust on/off

Cascade sensors on/off

Ignore Binding Warnings

Reset address table

return to configuration menu

for each channel

set channel number

description

description number

set cut-in temperature

use previous sensor***

defrost channel (off,1-8)

return to programming menu

number of control channels (1-50)

fast/slow display scrolling

Celsius/Fahrenheit temp. display

allow/do not allow keyboard isolate

anti-short cycle time (off, 1-240sec)

control differential

 
change 31 description on/off

change 32 description on/off

return to programming menu

*** only if cascade is on in security menu

Keyboard Controls



Increase setting or move to next menu item

Jump out of current menu, cancel progr.

Decrease Setting or prev. menu

Accept setting, move to next menu

Isolate control channel

press together 10 secs. to enter programming

Restore control channel